

A	Switch to Iambic A mode
B	Switch to Iambic B mode
D	Switch to Ultimatic mode
F	Adjust sidetone frequency
G	Switch to bug mode
I	TX enable / disable
J	Dah-dit-ratio adjust (300)
N	Toggle paddle reverse
O	Toggle sidetone on / off
P#	Program a memory
T	Tune mode
V	Toggle potentiometer
W	Change speed
X	Exit command mode
Z	Autospace On/Off
#	Play a memory w/o tx

A	Switch to Iambic A mode
B	Switch to Iambic B mode
D	Switch to Ultimatic mode
F	Adjust sidetone frequency
G	Switch to bug mode
I	TX enable / disable
J	Dah-dit-ratio adjust (300)
N	Toggle paddle reverse
O	Toggle sidetone on / off
P#	Program a memory
T	Tune mode
V	Toggle potentiometer
W	Change speed
X	Exit command mode
Z	Autospace On/Off
#	Play a memory w/o tx